

OFD Fender flares installation procedure.


Suitable for all OFD fender flares

Recommended tools:

Nr 1 Phillips screwdriver
Trim clip tool or small pry bar
Ratcheting wrench with sockets sets or similar
Clean cloth



OFD
OFFROAD FABRICATION

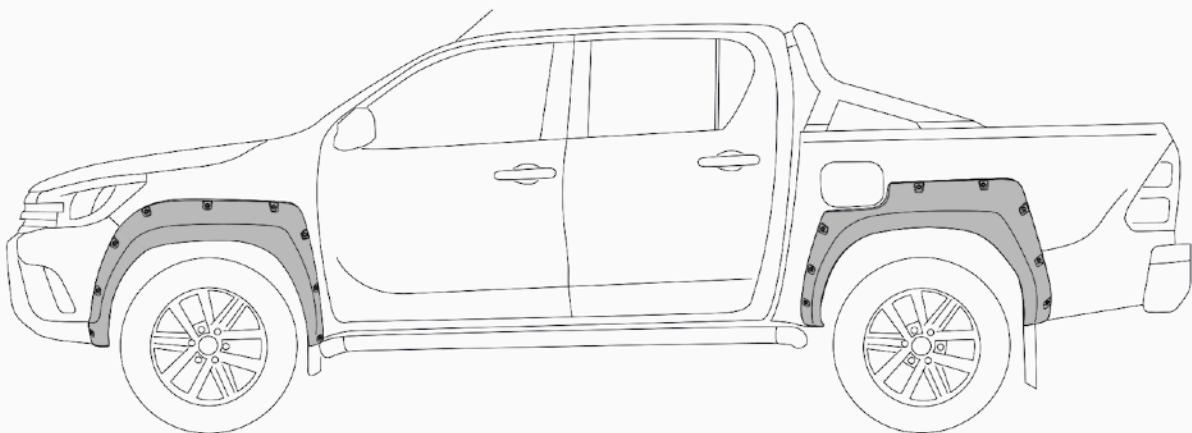

Wash the areas of contact on the vehicle and wipe dry both the vehicle and the Fender Flares with a clean cloth. ensure inside of Fender Flares where to be screwed is attached is clean.

Remove the mud flaps by removing and retaining the screw from inside the wheel arch as shown.

NOTE: Replacement screws are supplied, if any screw are damaged upon removing from the vehicle.

Place the fender slot screws in the holes as shown. After bringing the fender flare to its optimal position, perform the screwing process.

