

## OFD Hard tri-fold bed cover installation

Below installation, procedures are applicable to all low profile OFD tri-fold bed covers.

Recommended tools:

Nr 1 Phillips screwdriver  
Utility knife  
Alcohol rubbing pad or degreaser  
Ratcheting wrench with sockets sets or similar



Prepare a clean work surface. Remove packaging and use it as padding for the bed cover. Make sure there is no dirt or any debris around the bed edges prior to installation.

There are two types of rails.

- For installation direct to the bed edges see below.
- For installation to accessory rails **turn to page 3**.

Position installation rails with the bracket end facing the front of the vehicle.



Install side rails to the bed edges using three clamps on each side as shown in the picture. Make sure the edges of the inner clamps are well covered by provided foam stickers.



Tighten evenly each clamp while making sure the rail stays level. Check for any unwanted movement. **Continue on page 5.**





For installation on accessory rails.  
Remove end corners on each of the accessory rails.



Insert provided blocks and slide them into the rails. Reinstall the end cap.



Position the bed cover rail alongside the bed edge and align the blocks to match the openings.



Using Philips size 1 screwdriver introduce all bolts. Keep them loose at first, once you have all bolts introduced, make sure the rail is all the way in and level then tighten evenly.





Clean and degrease the front of the bed edge. Place the long rubber seal in place. Cut to length if necessary.



Position the bed cover first shortest element flat and align the holes with the brackets. Insert the bolts.



From underneath install large washers and nut as shown in the picture. Introduce a few rounds of threads. Do not tighten fully just yet.



Unfold at least two parts of the bed cover and check for proper side-to-side alignment. Once happy with the position close the tailgate and unfold the whole cover. Check for proper alignment front to back. Check again on all sides, and fully tighten the bolts mentioned in the step before.






Locate the part of the cover that will be touching the back of the cab once folded. Clean and degrease. Install provided foam bump stop. Depending on your vehicle you can cut two parts to have the cover well supported and your vehicle protected.



Install support brackets to the bottom of the first part of the cover as shown.



Inspect the seals around the bed cover. Adjust if necessary. New seals might require some time to be fully seated.

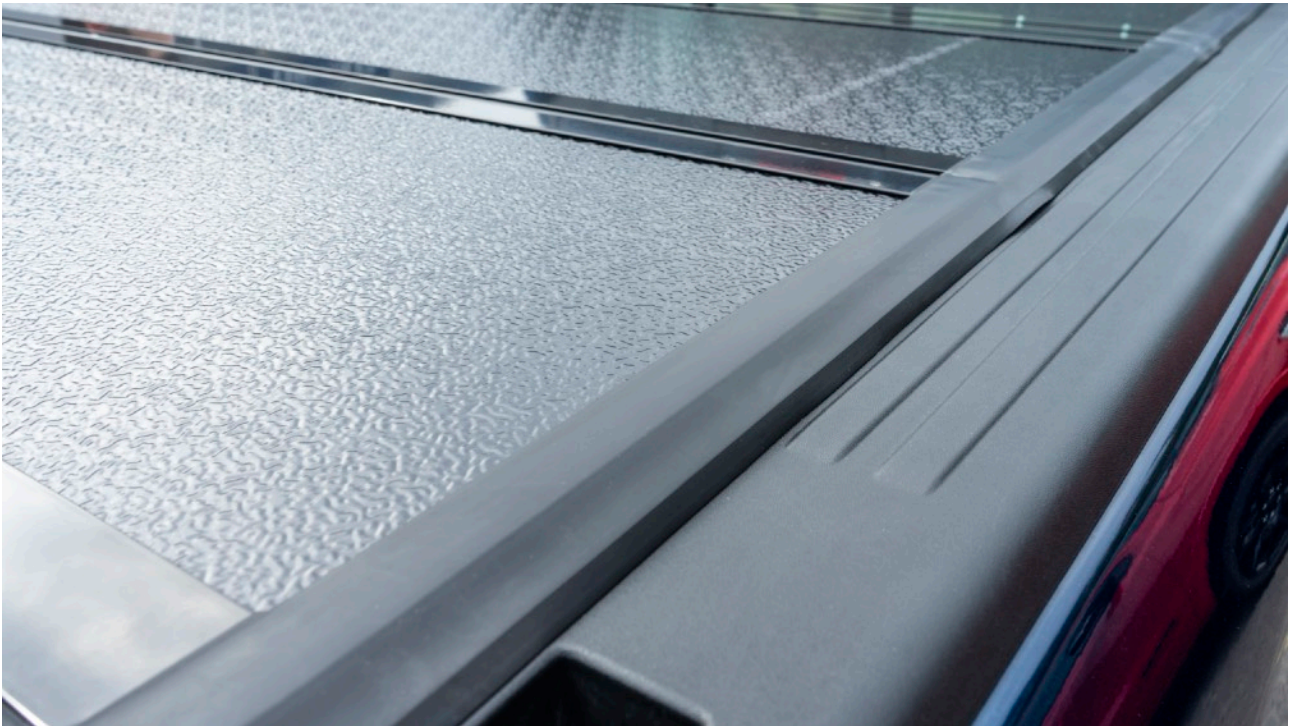

#### **CAUTION:**

Longer exposure to weather conditions and sunlight might affect the shade of product paint. Paint scratches and chips are normal on all vehicle equipment.

Paint damage can happen when off-roading but also during use on paved roads. It is the owner's duty to repaint and constantly maintain the good condition of the protective coat to prevent material corrosion.

Periodically check all the fasteners on all your accessories. We also recommend performing the check before every longer ride.

Each OFD product should be installed and checked for proper function by a trained and experienced professional. OFD is not responsible for any damage or harm caused by invalid installation.

Manufactured by  
Asports Spółka z ograniczoną odpowiedzialnością  
4 Józefa Marcika St.,  
30-443 Kraków, Poland.  
Made in China.