

OFD-Roof platform installation

Product Code: OFDPLAT220125FJM
OFDPLAT220140FJL
OFDPLAT220125TLC200M
OFDPLAT220140TLC200L
OFDPLAT220125TLC150
OFDPLAT220125TLC120
OFDPLAT220125REN
OFDPLAT220125DISCOM
OFDPLAT220140DISCOL
OFDPLAT220140TLC100
OFDPLAT220140Y62
OFDPLAT160125PX123
OFDPLAT160125HIL
OFDPLAT160125AMAROK
OFDPLAT160125DMAX
OFDPLAT160125L200



Recommended tools:

- Flat screwdrivers
- Nr 1 Phillips screwdriver
- Trim clip tool or small pry bar
- 13 mm open-end wrench
- 5 and 6 mm Allen Keys
- Silicone sealant.

Remove railings.

For most vehicles, removal procedures are very similar. If in doubt please refer to the vehicle service manual for specific procedures.

Remove plastic caps from railings to access mounting bolts. Unscrew all the mounting bolts and remove railings on both sides. Prepare for new mountings.



If your vehicle has no fixed points: Assemble roof rails with brackets, and place them on both sides of the roof of your vehicle to mark drill holes. Use the rails and brackets as a template. Make sure both sides are similar. Measure twice, double-check, and drill once. Insert the appropriate nut from under the roof. The headliner must be removed for this. Don't forget to apply the rust protective coat of your choice..

Clean and degrease around the mounting points.



Insert rubber seals around the vehicle mounting points.



Apply a moderate amount of silicon sealant of your choice on and around the fittings.



Prepare bolts and washers as shown.



With bolts inserted in the brackets, introduce them into the fittings. Make sure the brackets are facing outward the vehicle.




Tighten both bolts all the way in. Make sure to fasten both bolts fairly simultaneously to avoid any miss alignment.



Repeat the same procedures for each bracket on each side of the vehicle.



Install appropriate roof rails using M8 bolts included for each of the brackets. Hand tighten only.

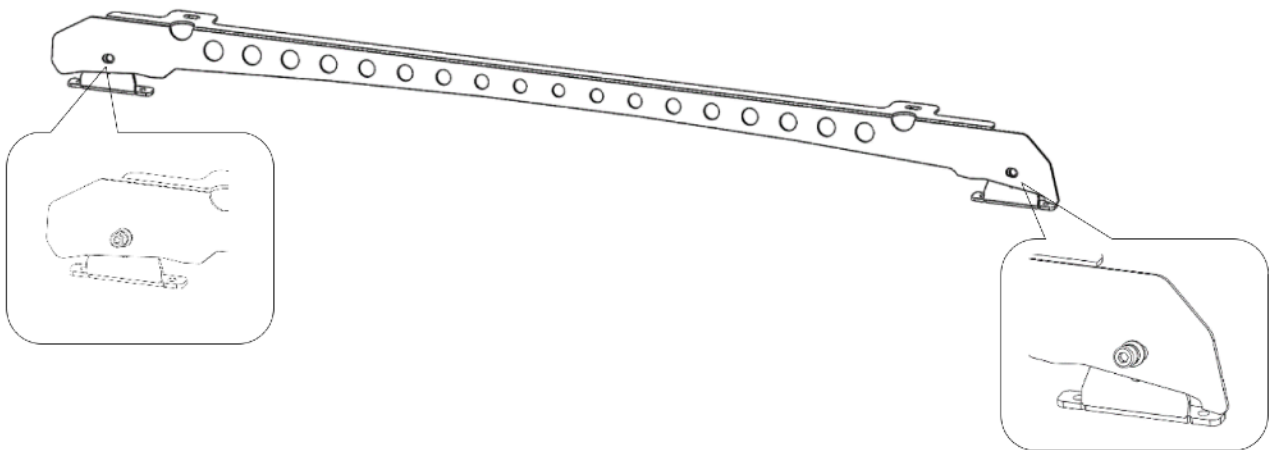

Some rails are directional. They will be marked with an "R" for the right side of the vehicle and An "L" for the left. The arrow should be pointed forward.



Install T-Nuts with bolts and washers on each mounting point on both rails. To make it easier point out the T-Nuts shown in the picture. The rough surface of the T-Nut should be pointing downwards.



With a help of your friend lift the platform and put it on top of the railings. Make sure the cross bars on the platform are aligned with the T-Nuts you installed in the previous step.



Rotate the T-Nuts 90 degrees to make sure they will lock. Tighten the bolt flush with the locking washers. Don't tighten fully just yet.



Fully tighten all roof rails to the brackets on each side.



Center the platform on the vehicle roof and tighten all the mounting bolts. Recheck all the fasteners after approximately 100 km.

CAUTION:

Longer exposure to weather conditions and sunlight might affect the shade of product paint. Paint scratches and chips are normal on all vehicle equipment.

Paint damage can happen when off-roading but also during use on paved roads. It is the owner's duty to repaint and constantly maintain the good condition of the protective coat to prevent material corrosion.

Periodically check all the fasteners on all your accessories. We also recommend performing the check before every longer ride.

Each OFD product should be installed and checked for proper function by a trained and experienced professional. OFD is not responsible for any damage or harm caused by invalid installation.

Manufactured by:

Asports Spółka z ograniczoną odpowiedzialnością

4 Józefa Marcika St.,

30-443 Kraków, Poland.

Made in China.